




V3 Z-Wave Firmware Upgrade Guide

1. Go to App Store and download nRF-Toolbox from ASA.

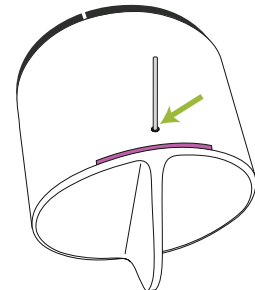


2. Start the Danalock in firmware upgrade mode with the following steps: Turn the Danalock off by removing a battery. Hold down the button on top of the Danalock with a paper clip or similar object. Turn on the Danalock by reinserting the battery while holding down the button. The Danalock will light up purple to indicate that it has been turned on in firmware upgrade mode.





3. Go to [Danalock.com/manual-upgrade](https://danalock.com/manual-upgrade) and download the latest firmware file.


4. When the file has been downloaded, choose to open the file with nRF-Toolbox. If the nRF-Toolbox app is not recommended for opening the file, press "More" and select the nRF-Toolbox among the options. Make sure that your phone has Bluetooth turned on.

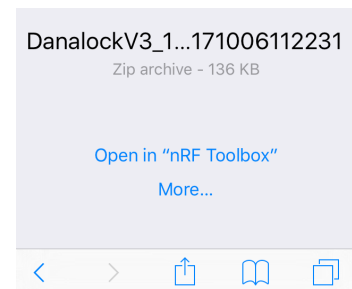

5. The nRF Toolbox will open in "DFU" mode. Press the "Select Device" button, which will show a list of devices. Choose the device called "dfuDanaDevice" and press "Upload". The firmware will now be uploaded and installed on the Danalock. The Danalock will light up blue while connected to your phone.

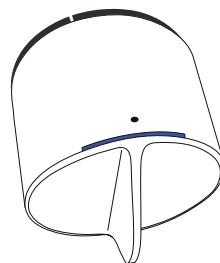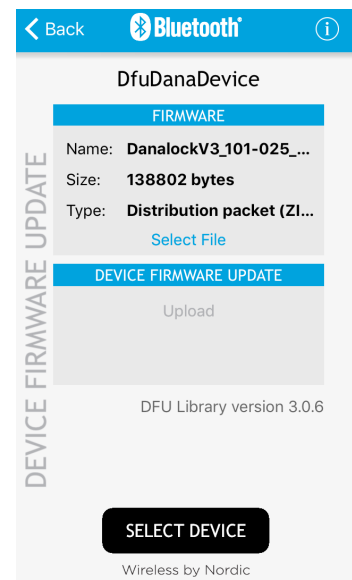

6. When the firmware has been installed the Danalock will turn off for around 30 seconds while applying the firmware installation. When the Danalock finishes it will light up white. Please don't touch the Danalock until the setup has completed.

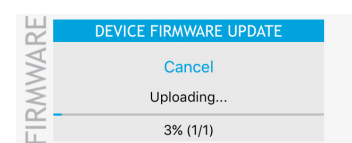

7. After completing the firmware upgrade the Danalock has to be calibrated again.